



For new plants use 1/4" micro tubing and Netafim Micro Tubing Adaptor to put water directly on each new plant's root ball (remove after 1 year).




1" Valve and 3/4" PVC header:  
Max flow: 8 gpm

Max. 4 gpm

Max. 4 gpm

3/4" pvc header

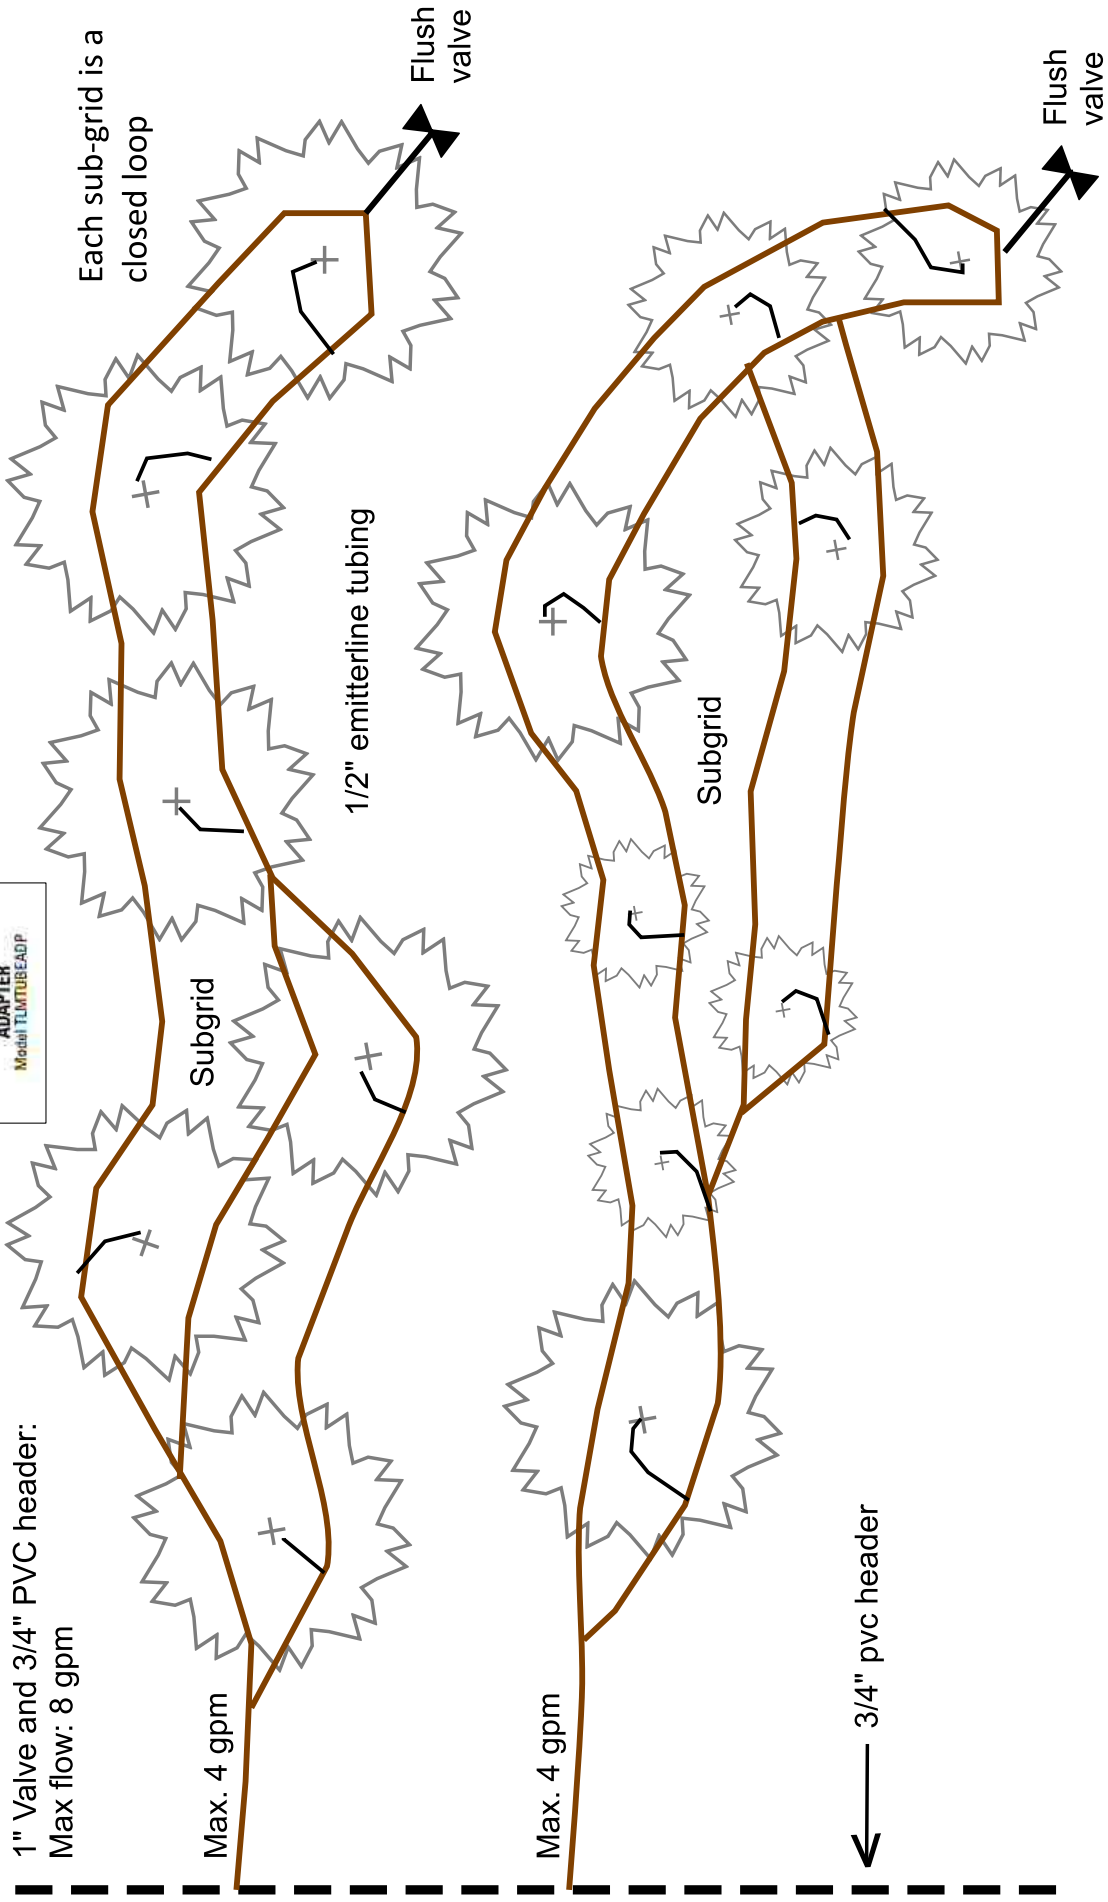

Each sub-grid is a closed loop

1/2" emitterline tubing

Subgrid



Subgrid

Loose grids with 18" x 18" spacing for emitters and rows in clay or clay loam soil


Plug all emitters that aren't needed in the beginning with Netafim drip-per plug rings. Remove them as the plants grow.

Small plants < 30"  
Option to use blank tubing  
between plants


All flush valves manual

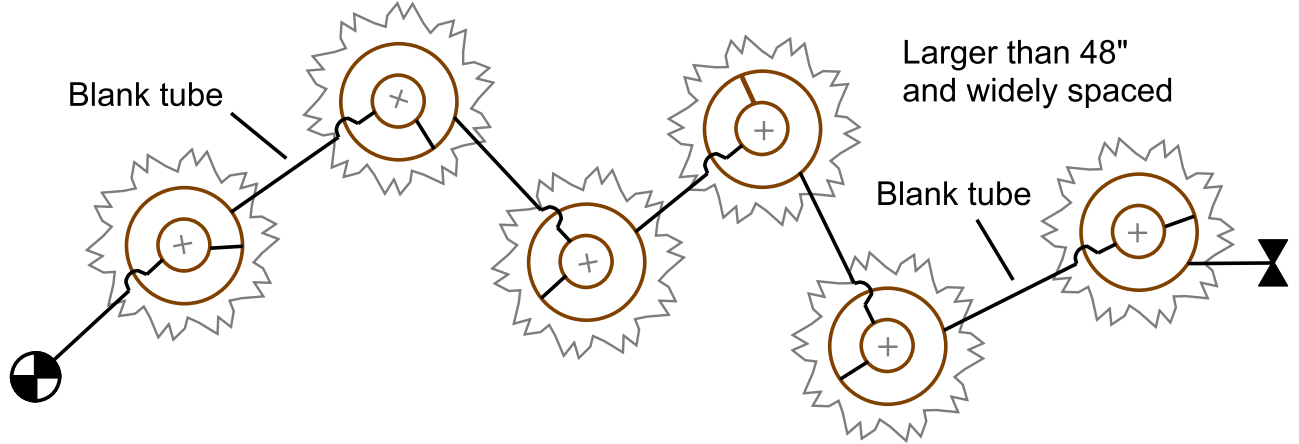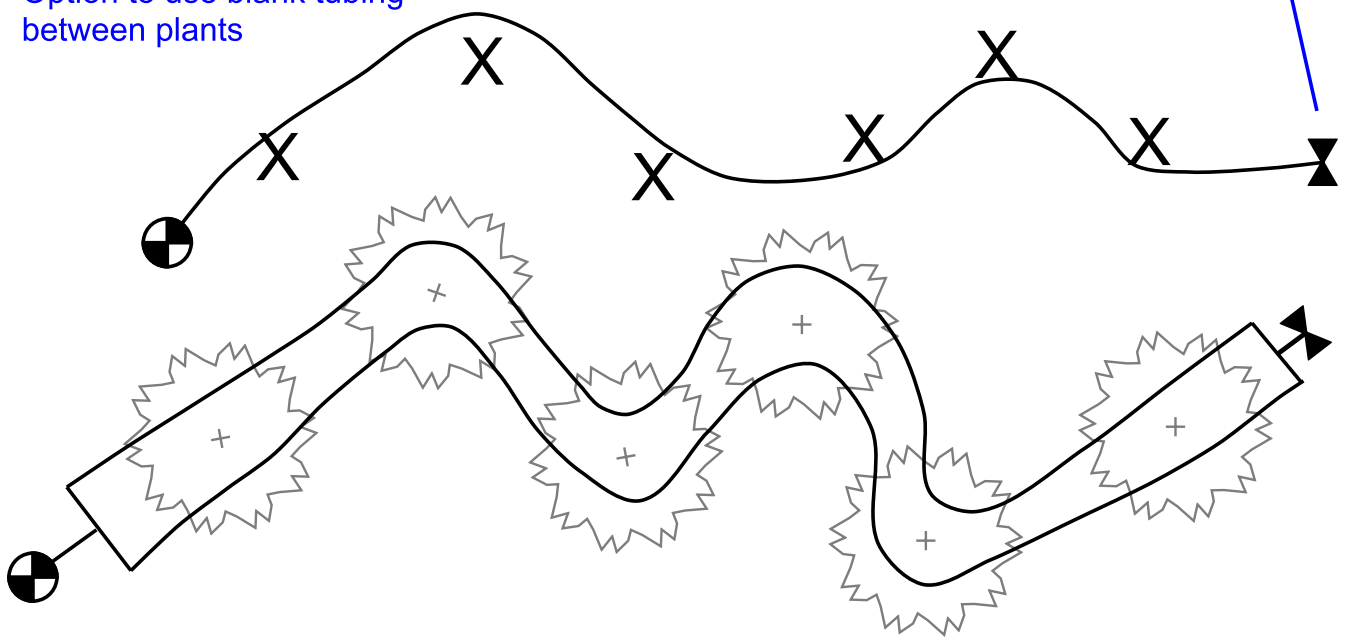

Adapt to complex shapes

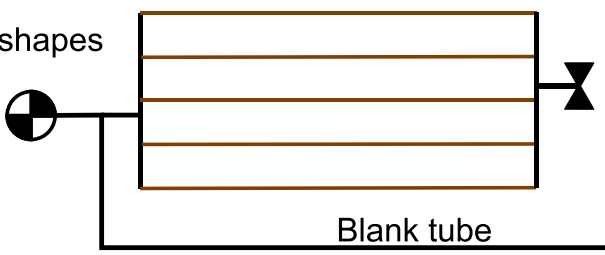

multiple small areas densely planted

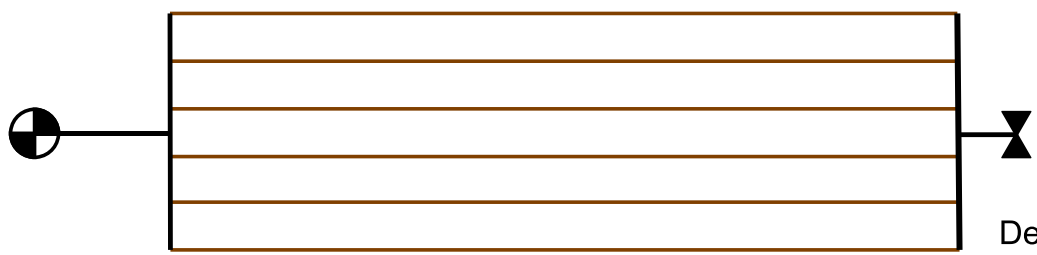

Densely planted large areas